



Default User Name and Password for PCDVR Range:

XP4SW25
XP16SW50
XP16SW100
XP16SW200
XP32SW200
XP16SW400

If you press the Pad lock button and the software prompts you for a user name and password please use:

User Name: Administrator

Password: Administrator

*Note this is the default user name and password if you have changed them you will need to remove software complete from Add/Remove and all registry entries for
DVSS4*