

E4DVRCD Quick Guide

To enter the menu

Press the stop button, then press the blue menu button.

To play back

Press the **STOP** button, then press the **PLAY** button.

The screen will turn blue, and will be titled **TIME SEARCH**

The **START** and **END** times cover the range of recording in the DVR.

Under this you will see a date and time like the one bellow.

>2008/06/08 13:52:29<

This is the date and time that you change, for the date and time you want to play back.

Press the **SELECT** button , the arrows at either side of the date and time should disappear and move on top.

You can move the arrow to the left and right by using the **UP** and **DOWN** arrows on the DVR, to change the value use the **SELECT** button.

Once you have the correct date and time, press the **PLAY** button to start play back.

To record to CD

Place a blank CD-R into the drive.

When playing back press the **UP** arrow to mark the start of the recording, and press the **DOWN** arrow to mark the end. Then press the red **RECORD** button to write the video to the CD, the CD will be ejected when it is completed.