

Specifications

Model: EVW301S	Camera
Picture Type:	Colour
Image Sensor:	1/3" Omnivision CMOS
Resolution:	300 TVL
Lens Viewing Angle:	78°
Infra Red Nightvision:	No
Minimum Illumination:	2 Lux
Audio:	Yes
Operating Voltage:	8V DC 200mA Regulated
Suggested Power Supply:	Supplied (optional battery not inc.)
Mounting:	Wall, Ceiling or Portable
Weatherproofing:	No
Dimensions (WxHxD):	23x23x23mm

Receiver

Video Out:	Phono Socket
Audio Out:	Phono Socket
Operating Voltage:	12V DC 300mA Regulated
Suggested Power Supply:	Supplied
Mounting:	Desk
Weatherproofing:	No
Dimensions: (WxHxD):	78x23x92mm (excluding antenna)

TECHNICAL SUPPORT:

For Technical Support please contact your local distributor.

LIMITED WARRANTY:

This product is supplied with a limited 1 Year warranty. The Warranty excludes products that have been misused, (including accidental damage) and damage caused by normal wear and tear. In the unlikely event that you encounter a problem with this product, it should be returned to the place of purchase.

EXTRA value

CCTV



Before you begin

- Please unpack the box carefully and identify that all the parts are present.
- Make sure you use only the recommended power supply. Damage caused to the monitor by incorrect voltage or wiring is not covered by the warranty.

EVW301S

 
Wireless Covert Camera & Receiver

Installation & Setup


1. Connect the camera bracket to the camera.
2. Mount camera on to a secure surface and then adjust to a suitable viewing angle.



3. Connect the power lead to the power socket at the back of the camera, and plug the adapter into the mains power supply or connect a 9V cell to the battery lead for portable applications.

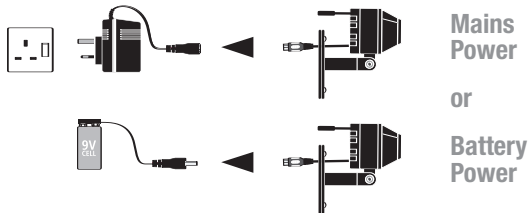


 4. Connect the receiver to a TV/Monitor or recording device with the AV cable supplied. (TV/Monitor should be set to AV channel).

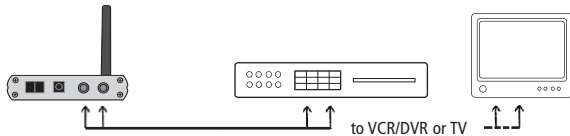

5. Connect the power adapter to the receiver, then switch unit ON.

 6. Set the channel on the receiver to the same as that of the camera by pressing the channel button continuously. Once the receiver has picked up the signal, the camera image will be displayed on screen.



NOTE:

- The Receiver can support up to 4 wireless cameras within a 100 metres range line of sight. Please note however the range could be reduced by 50% to 75% when walls, ceilings and other obstacles are in between the cameras and receiver. We also recommend that only 3 cameras are used as using 4 in the same location can cause interference. Each camera **MUST** be set to work on different channels (1 to 3) for the Receiver to work correctly.
- The channel number of the camera is marked on the back of the camera.

Troubleshooting

Problem	Solution
Nothing appears on the screen	<ol style="list-style-type: none"> 1. Check the power is connected properly at the mains for the camera AND receiver. 2. Check camera channel is correctly selected on the receiver 3. Check if the contrast may have been over adjusted
Picture is unclear or distorted	<ol style="list-style-type: none"> 1. Check to see if the Camera may be experiencing interference in the area that it has been installed in. (e.g. HighVoltage wiring, other electric equipment.) 2. Adjust antenna on camera and/or receiver unit 3. If you are using a Wireless Network or other 2.4GHz equipment nearby like bluetooth these may interfere, to cure this try moving the position of the other equipment if Bluetooth, or if a Wireless Network then change the channel number on your Router/Access Point.
Receiver does not pick up multiple cameras	<ol style="list-style-type: none"> 1. Check each camera is set to a different channel.