

How to change camera model back to default for XSD27ZS

If by chance you switch the camera model away from the default you will need to change this back, as you will lose all PTZ function with the dome.
To get the dome working again please follow these instructions.

If by chance you switch the camera model away from the default you will need to change this back, as you will lose all PTZ function with the dome.

To get the dome working again please follow these instructions.

Press 94 then CALL or Preset 95 in some cases depending on the controller, This will show the below menu:



Next Select CNB by moving the joystick down then to the right to select this option, Then Select 200P, by moving the joystick to the right again, as shown below:



Now leave the dome powered on, DO NOT POWER OFF THE DOME; the dome will reboot its self.

Once rebooted you will have full functionality of the dome once again.

If you have any issues please feel free to contact our technical support line on 0871 222 1430

Xvision Technical Team