

Menu Entry for the X4/8/16D DVRs

Entering the password for the menu of the X4/8/16D DVRs

Step 1: Enter the menu

Press the Menu button on the DVR or the remote control and go to the Main Menu icon. Press Enter on the DVR or remote to proceed.



Step 2: Enter the password

When the Admin login screen appears press the Enter button and then enter **123456** for the password.



Once you enter the password press the Return button on the screen.

Step 3: Done!

You can now use the menu to configure your DVR.

