

Firmware upgrade on XPR16P with FPGA Update

Please follow the steps to upgrade the DVR firmware via USB Memory Stick

Step 1:

Download the relevant firmware from attachment or from http://factory.y3k.com/Files/FIRMWARE/XPR16P_FIRMWARE/4689/upd_600s.zip

Step 2:

Extract the folder **UPDXX** and copy it to the ROOT of your memory stick. (You will need an application to open any software downloaded from the factory site. Install Winrar to extract downloaded files. Please note all software is Windows based unless specified).

Step 3:

Insert the USB Memory Stick into DVR

Step 4:

Go to **Main Menu > System Setup > Version > Software Upgrade via Local Device**

Step 5:

Change value to **YES** and press Enter, unit will reboot once firmware update is complete.

Once the unit has rebooted...

Step 6: Leave the USB Memory Stick in the unit

Step 7: Navigate to **Main menu > System setup > System/Version Info**

Step 8: Select **FPGA Upgrade via Local Device**

Step 9: Change value to **YES** & press Enter, unit will reboot once firmware update is complete.