

## Installing New Drivers and Software

Please follow the steps to install OR re-install the software and get the system up and running with our Xvision PC based DVR Cards for viewing cameras. This can be done if you have just installed your PC DVR Card OR you wish to update the drivers on your system.

Uninstall the existing PC DVR software drivers...

### Step 1:

Put the X-Vision 2005 (or if you have Xvision 2004 CD) in the CD drive.

### Step 2:

Navigate to the CD folder and open DRIVERS > DVRDRIVERSETUP.EXE

Click on the **4th Option**

Click OK > Then click OK again > The PC will restart.

Windows will say FOUND NEW HARDWARE - **DO NOT CANCEL** and **DO NOT CLICK NEXT IGNORE** the message and then...

Reinstall the PC DVR software drivers...

### Step 3:

Navigate to the CD folder and open DRIVERS > DVRDRIVERSETUP.EXE

Click on the **1st Option**

Click OK > Then click OK again > The PC will restart.

After the system comes back up it will not show you the message that windows has found new hardware.

## Setup the PC DVR software...

### **Step 4:**

Navigate to the CD folder and open LOCAL PC SOFTWARE > double click on the BLUE SETUP icon

Click NEXT

Click all 3 ticks > Click NEXT and follow the on screen instructions > The PC will restart

When the system comes back up again you should see the camera(s).

## To enable all cameras...

### **Step 5:**

Go to SETTING > CAMERAS

Enable the desired camera by double clicking on the camera number.

Click on CONTROL > Select the 'Video Format' as PAL BDGHI

Click EXIT.