

Reactivating Cameras

Please follow the steps to reactivate 'inactive' cameras in the PC DVR display window. This should be done if you cannot see all the cameras in the system OR if only one camera appears in B/W.

Step 1:

Click on the SETUP button (icon with two little screws). Enter your user name and password to access the menu.

Step 2:

Click on CAMERA.

Step 3:

Double click the INACTIVE cameras to activate them. They will change from DULL BLUE (indicating camera is inactive) to BRIGHT BLUE in colour (indicating they are active).

Please note that the CURRENTLY SELECTED camera always appears PINK in colour.