



XSP036 FAQ's

- Default Menu password if prompted 000000
- WDR is not accessible in the menu system, to turn WDR on please CALL preset 62 and CALL preset 63 to turn WDR off.