


Setting up / Changing the Recording Drive on Xvision PC DVRs

Please read this if you need to change the drive on which your recordings are saved on your Xvision PC DVR system.

Step 1:

Go to the Start Menu and then type the following in the run command: **regedt32**

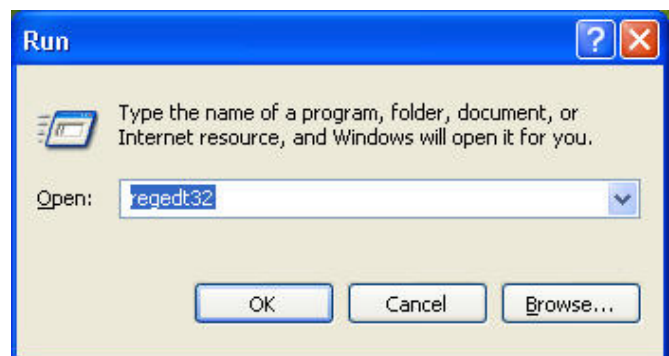


Step 2:

Then navigate to the folder in 'My Computer':

HKEY_LOCAL_MACHINE > SOFTWARE > DVSS4DB


Delete the **DVSS4DB** folder

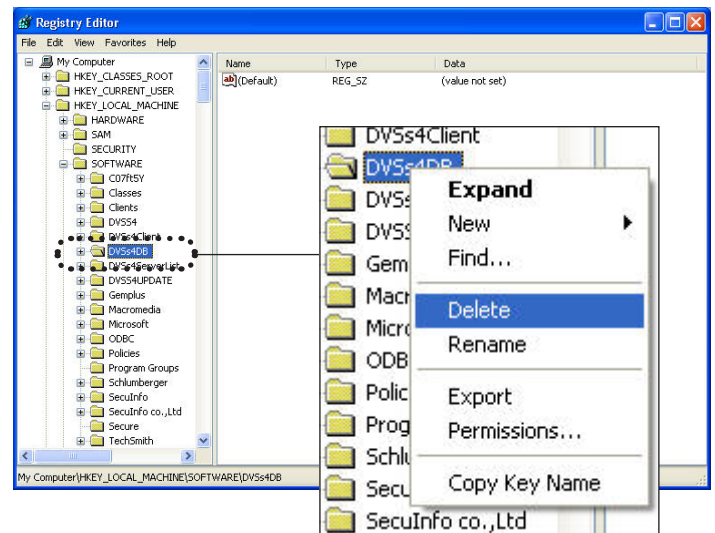

Step 3:

In 'My Computer', go to the Recording Folder in the drive you no longer wish to set as the Recording Drive.

Delete the folder called **DVSSDATA** located in the drive.

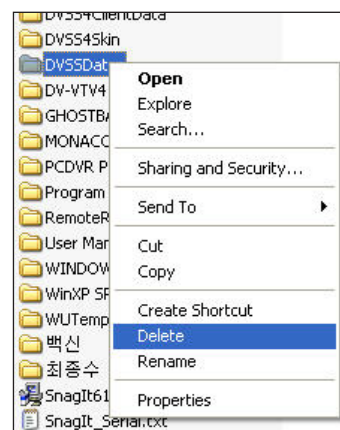


Step 4:

Start the Xvision Software

Go to SETUP > DRIVE INFORMATION

Change the desired Drive Type to RECORDING.

Click APPLY to confirm settings.

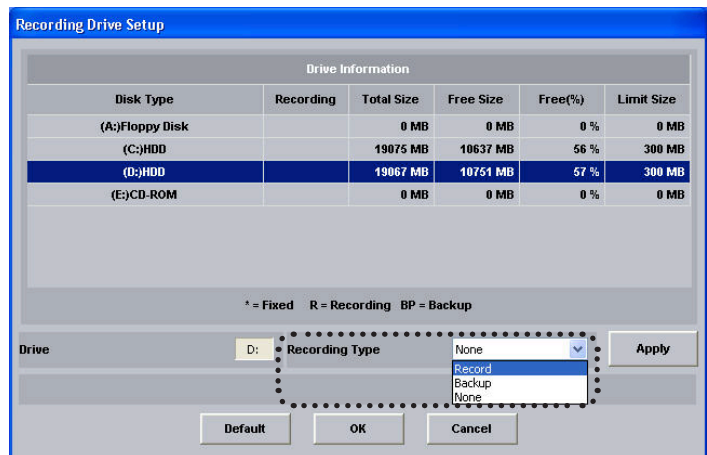

Step 5:

You will see that the Drive Type will change in the System Information.

